




PRECISION

**OPERATING INSTRUCTIONS
AUTOMATIC**

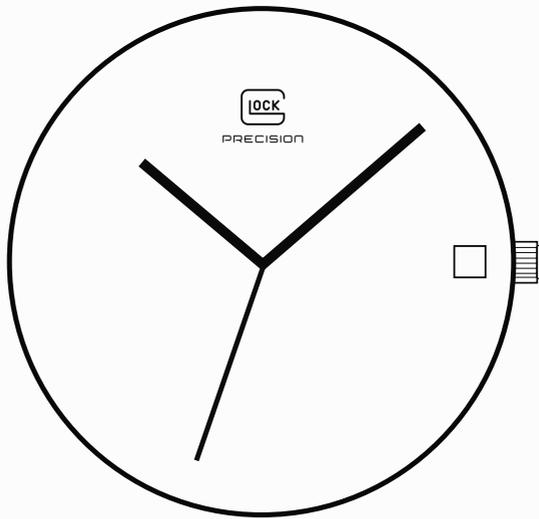

SETTING THE DATE

Pull the crown out to position **2** and turn it clockwise until the current date is shown.

Push the crown back to position **1**.*

* Please avoid setting the watch between 8.30 p.m. and 2 a.m., as this may prevent the date from changing correctly on the following day.

SETTING THE TIME

Pull the crown out to position **3** and turn it clockwise until the current time is displayed.

Take care, whether it is morning or afternoon, in order to set the current time correctly.

Push the crown back to position **1**.

HAND-WINDING

You can also set your automatic watch in motion again by hand-winding it. To do so, turn the crown clockwise in position **1** about 15–20 times until the natural movement of the hands resumes.

